INDEX 116

Index.

| | | | | | Page |
|---------------------------------|----------|---------|---------|--------|-----------------------------|
| Accumulators | | | | | 34, 80 |
| " Care of | | ••• | 1 | 1, 12, | , 44, 80 |
| " Charging | | | | | 83 |
| " Dispatching, and | d Recep | otion o | f | | 80, 82 |
| | | | | | 44 |
| " with Solidified I | Electrol | yte | | | 81 |
| Air Pump | | | | | 12, 89 |
| Air Valve in Carburettor, Clean | ning | | | 12 | , 40, 41 |
| Anti-freezing Mixture | | | | | 97 |
| D 1 4 1 E'II' | ••• | ••• | ••• | | 16 |
| | ••• | ••• | ••• | ••• | |
| On Level in | | ••• | ••• | ••• | 5, 16 |
| Spring Bearing, Gr | reasing | ••• | ••• | ••• | 6, 19 |
| Tie Rod | ••• | ••• | ••• | ••• | 99 |
| Battery Contact Breaker | ••• | ••• | ••• | ••• | 12, 42 |
| " Ignition System | | | | | 75 |
| Bevel Gear Box, Filling | | ••• | ••• | | 16 |
| Bodies, Preservation of | | | | | 104 |
| Brake Adjustment, Foot | | | | | 14, 52 |
| " Rear | | | | | 14, 53 |
| " Compensation, Rear | | | | | 9, 31 |
| " Levers, Oiling hand | | | | | 9, 30 |
| " Mechanism, Öiling Rea | r | | | | 11 |
| " Rear | | | | | 9, 31 |
| " Oiling, Foot | | | | | 9, 30 |
| " Shoes, Cleaning Rear | | ••• | ••• | ••• | , 9 |
| Brakes, Use and Abuse of | | ••• | ••• | ••• | 61 |
| - | ••• | ••• | ••• | | |
| Carbon Deposit | ••• | ••• | ••• | J | 3A, 50 |
| Carburation | ••• | ••• | ••• | | 86 |
| Carburettor Air Valve, Cleanin | ıg | ••• | ••• | 12, | 40, 41 |
| Changing Gear | | ••• | ••• | | 59, 60 |
| Clutch Brake | | | | | 74 |
| " Care of | | | | | 13, 70 |
| " Coupling, Oiling | | | | | 17 |
| " How to operate | | | | | 59 |
| " Mechanism, Oiling | | | | | 9, 29 |
| " Slipping | | | | | 73 |
| " Fierce | | | | | 70 |
| " Spigot, Lubrication of | | | | | 71 |
| Coil, Length of Spark with | | | | | 44 |
| Coil Trembler, Adjustment of | | | | | 44, 45 |
| con fremoier, Aujustinelli of | ••• | • • • | • • • • | ъσ, | г т , т Э |

| | | | | | | Pa | ıge |
|---------------------------|----------|---------|-----|-----|-------|-----|----------|
| Commutator, Oiling Bat | | | | | | 7, | 25 |
| Compensation for Rear | Brakes | | ••• | ••• | ••• | 9, | 31 |
| Compression | | | | ••• | 1 | 3A, | 50 |
| Consumption of Petrol | | ••• | ••• | ••• | ••• | | 88 |
| Contact Breaker, Battery | <i>/</i> | | ••• | ••• | | 12, | |
| " " Magne | to | | ••• | ••• | | 12, | |
| " " Oiling | Battery | | ••• | ••• | ••• | | 25 |
| Control Mechanism | ••• | | | ••• | 7, 8, | 28, | 29 |
| Crank Chamber, Filling | | | ••• | ••• | ••• | | 15 |
| Cylinders, Care of | ••• | | | ••• | 1 | 3A, | 50 |
| " Removal of | | | | | | | 98 |
| Distributor, Cleaning Ba | tterv | _ | | | 3 | 32, | 33 |
| " Magneto | | | | | | 12, | 43 |
| " Oiling Batte | erv | | | | | 9, | 25 |
| Draining Engine Body . | | | | | | 11, | |
| " Water System | | | | | | 11, | 36 |
| Driving, Notes on | | | ••• | ••• | | 58, | 63 |
| • | | | ••• | ••• | ••• | , | 65 |
| Engine Lubrication | | ••• | ••• | ••• | ••• | 11 | 36 |
| " Oil Well, Cleani | 11g | ••• | ••• | ••• | | 11, | |
| " " Filling | ••• | ••• | ••• | ••• | | 11, | 15 |
| " Overheating | | ••• | ••• | ••• | ••• | | 96 66 |
| Qualitity of oil il | n | ••• | ••• | ••• | ••• | | |
| " Starting the | | ••• | ••• | ••• | ••• | 11 | 58 |
| SUDDOUS | ••• | ••• | ••• | ••• | ••• | 11, | |
| Exhaust Box, Care of | ••• | ••• | ••• | ••• | ••• | | 99 |
| Exhaust Smoke | | | ••• | ••• | ••• | 12 | 67 |
| Extra Oil Filter and Valv | | | ··· | ••• | ••• | 13, | |
| " " Use of Acceler | ator Pe | dal foi | • | ••• | ••• | | 64 |
| Fan Bearing, Oiling | ••• | | | | | | 25 |
| " Belt Adjusting | | | | | | 11, | 38 |
| Filling Bevel Gear Box | | | | | | | 16 |
| " Crank Chamber | | | | | | | 15 |
| " Petrol Tank | | | | | | | 57 |
| " Radiator | | | | | | | 57 |
| Front Wheel Bearings, C | Care of. | | | | 1 | 3A, | 48 |
| " Wheel Hubs | | | | | | | 49 |
| " Axle Pivots, Oilir | ıg | | | | | 22, | 23 |
| Frost, Protection from | | | | | | | 97 |
| Gear Box, Oil Level in | | | | | | | 5 |
| " Changing | | | | | | 59, | |
| " Oil Recommended | | | ••• | | | ٠,, | 98 |
| Governor, Oiling | | . Cuis | ••• | ••• | | 7 | 26 |
| | | ••• | ••• | ••• | | | |
| Half-yearly Operations | ••• | | ••• | ••• | ••• | 1 | 3A |
| Hand Levers, Oiling | | | | | | | 30 |

| | | | Page |
|------------------------------------|-----|-----|--------------|
| Hills, On Ascending and Descending | ıg | ••• | 60 |
| Ignition Notes | | | 60, 79 |
| " Resetting Magneto | | | 78 |
| " System, Battery | ••• | | 75 |
| " " Magneto Incrustation | ••• | ••• | 76 |
| T | ••• | ••• | 57 |
| Insurance | ••• | ••• | 100 |
| Jets, Adjustment of Carburettor | ••• | | 86 |
| Lamps, Electric Tail | | | 85 |
| Licenses for Cars | | | 99 |
| " "Storing petrol | | | 106 |
| Lubrication of Engine | | | 65 |
| " Weekly | | | 5, 15 |
| " Weekly " Monthly | | | 10, 34 |
| Magneto Brake, Lubricating | | ••• | 8, 28 |
| " Chattering of Contact Breaker | ••• | ••• | 96 |
| " Contact Breaker | ••• | ••• | 11, 41 |
| Distributor | ••• | ••• | 12, 43 |
| Failure at Low Speed | ••• | ••• | 79 |
| ignition, Resetting | | ••• | 78 |
| System | | ••• | 76 |
| Olling | | ••• | 8, 26, 27 |
| " Drive Shaft Oiling | | ••• | 8, 28 25 |
| Make and Break, Oiling Battery | | ••• | |
| Missing Fire | | ••• | 77, 88 |
| Mixture | ••• | ••• | 86 |
| Monthly Operations | ••• | ••• | - |
| Oil, Filling Crank Chamber with | | ••• | 5, 11, 15 |
| rintel and valve, extra | | ••• | 13,47 |
| Level in Back Axie | | ••• | 5 |
| Claux Chambel | ••• | ••• | 15 |
| " " Gear Box | | ••• | 5 69 |
| " Pressure Failure | ••• | ••• | 66 |
| " " Required " Pump Details | ••• | ••• | 67 |
| | ••• | ••• | 66 |
| // · T · O · · · O | ••• | ••• | 66 |
| oils Recommended for R-R Cars | ••• | ••• | 50.00 |
| | ••• | ••• | 60 |
| O'1 T 1 | ••• | ••• | 1.5 |
| " Well, Cleaning Engine | | | 36 |
| Overheating of Engine | | | 96 |
| Dadal Machaniam | | | |
| redai Mechanishi | ••• | | 9, 29 |

| | | | | | | Page |
|---|----------|--------|---------|-----|-------|---------|
| Petrol Consumption | | | | | | 88 |
| " Pressure feed Sys | stem | | | | | 89 |
| " Storage | | | | | | 107 |
| " Tank Cleaning | | | | | | 13 |
| " Filling | | | | | | 57 |
| " Recommended for | or R-R | | | | | 58 |
| Plugs, Inspecting Sparki | | | | | | 34, 35 |
| " Locating Faulty. | | | | | | 77 |
| Plug Points, Standard Se | etting f | for | | | | 34 |
| Plugs, Position of Spark | ing | | | | ••• | 34 |
| Pre-ignition | | ••• | ••• | ••• | | 34 |
| Pressure Feed System | | | ••• | ••• | | 89 |
| Propeller Shaft Joints, C | | | ••• | ••• | | 12,46 |
| | | | ••• | ••• | | 26 |
| | | | ••• | ••• | | |
| Radiator, Filling | | ••• | ••• | ••• | ••• | 11, 57 |
| Radius Rod, Adjustmen | | | ••• | ••• | | 14, 54 |
| " Rods, Oiling Rear Axle Tie Rod | ••• | ••• | ••• | ••• | | 18, 19 |
| Rear Axie Tie Rod | ••• | | ••• | ••• | | |
| " " Oil Level in | ••• | ••• | ••• | ••• | ••• | 5, 16 |
| Relief Valve for Air Pun | np | ••• | ••• | ••• | ••• | 12, 89 |
| " " Oil Pun | np | | ••• | | ••• | 66 |
| Road Wheels, Removal | and R | eplace | ment of | 01 | ••• | 93 |
| " " Lubricati | on of . | | | ••• | ••• | 13 |
| " Springs, Lubricati | on of . | | | | ••• | 12, 38 |
| Rolls-Royce Successes Rudge-Whtiworth Whee | | ••• | ••• | | ••• | 111 |
| Rudge-Whitworth Whee | els | | | ••• | ••• | 11, 95 |
| Rust in Water System | | ••• | ••• | ••• | ••• | 57 |
| Shock Absorbers | | | | | | 101 |
| Adiusi | шеш о | of | | | 1 | 13, 104 |
| Side Slip | | | | | | 62 |
| Silencer, Care of | | | | | | 99 |
| Skidding | | | | | | 62 |
| Skidding Slow Running | | | | | | 64 |
| Smoky Exhaust | | | | | | 67 |
| Sparking Plugs, Inspect | inσ | | | | | 35 |
| Sparking Plugs, Inspecting Position | ı of | | | | | 34 |
| Spark Gaps, Standard | | | | | | 34 |
| " Length (Coil) | | | | | | 44 |
| Spring Bracket Bearing | | | | | | 19 |
| " Clips, Inspection | | | | | | 14 |
| Springs, Lubricating Ro | | | | | | 12, 38 |
| Spring Shackles, Greasi | | | | | | 6, 20 |
| Starting the Car | 5 | | ••• | ••• | | 58 |
| Starting the Car " Engine | ••• | | ••• | ••• | ••• | 58 |
| Liigiiic | ••• | ••• | ••• | ••• | • • • | 50 |

INDEX 120

| | | | | Page |
|-----------------------------------|-------|-----|-----|-----------|
| Steering Box, Oiling | | | | 7 10 |
| " Connections Oiling | | | ′ | 7, 14, 23 |
| " Column Bearing Oiling | | | | 7 |
| " Gear Adjustment | | | | 53 |
| " Lock, Use and Abuse of | | | | 62 |
| " Pivots, Oiling | | | | 6, 22 |
| Storing Cars | | | | 100 |
| " Petrol | | | | 107 |
| Swivels, Oiling Steering | | | ••• | 6, 22 |
| | | | | 85 |
| Tank, Cleaning Petrol | | ••• | | 12 |
| " Filling Petrol | | | | 57 |
| Tappets, Adjustment of | | ••• | | 52 |
| Torque Rod Adjustment | | | ••• | 14, 54 |
| " " Oiling | | | | 6, 17 |
| Trembler Diagram | | | | 45 |
| " of Coil, Adjusting | ••• | | ••• | 12, 43 |
| Two Yearly Operations | | | | 14, 56 |
| Tyres, Care of | | | | 64 |
| Universal Joints, Oiling | | | | 12, 46 |
| Valve Grinding | | | | 13A,51 |
| Valve Tappets Adjustment of | | | | 13A,52 |
| Water Circulation failure | | | | 97 |
| " System, Filling the | | | | 57 |
| " Level in Radiator | | | | 37 |
| " Pump Couplings | | | | 8, 26 |
| " " 0:1: | | | | 8, 26 |
| " System, Draining | | | | 11, 36 |
| " Rust and Incrustation | in | | | 57 |
| Weekly Operations | | | | 5, 15 |
| Wheels, Removal and Replacement o | f Roa | d | | 93 |
| " Rudge-Whitworth | | | | 11,95 |